




In Touch
Ministries®

MESSENGER 8





Mini User Manual

Power On/Off


Hold  for 2 seconds to turn the Messenger on or off. The LED light at the top of the keypad indicates the function the Messenger is performing.

Switching Between Sections

Press  to switch between Section 1 (Introduction/Messages) and Section 2 (Life Principles to Live By). A 2-second press will skip to the beginning of Section 1.

Press  to switch between Section 3 (Genesis-Job), Section 4 (Psalms-Malachi), and Section 5 (New Testament). A 2-second press will skip to the beginning of Section 3.

Charging

While the player is on, a brief press  on will perform a battery test. The LED will blink rapidly for 2 seconds according to the remaining capacity (**Green**: 70-100%, **Yellow**: 15-69%, **Red**: 1-14%).

For fastest charge, connect the player to an electrical outlet using the charger provided for about 5½ hours* or until the indicator light stops blinking.







 
 
 
 

For solar charging, place the player with the solar panel facing bright sunlight for about 9 hours.* When charging by sunlight, the indicator light does not blink.

**Typical for a completely depleted battery.*

Messenger Features



Download full instructions:
<https://www.intouch.org/messenger-8>

-  Power
 -  Torch
 -  Radio
 -  Messages
 -  Bible
 -  Playback (hold 2 sec) and
Language (press briefly)
 -  Book Back | Forward
 -  Chapter Back | Forward
 -  File Back | Forward
 -  Volume
 -  Pause
1. Status LED
 - a. **Red** (Life Principles)
 - b. **Green** (Bible/Micro SD)
 - c. **Yellow** (Radio)
 2. Lanyard Hole
 3. Solar Panel Charger
 4. Reset Button
 5. Audio Jack
 6. Type-C USB Port
 7. Torch LED
 8. Micro SD Card Reader